


- \* Does not include O-rings
- \* No Incluye sellos de gomas
- \* Exklusiv Dichtringe
- \* Joints exclus

In the U.S.A., you will find your nearest Senco location listed in the Yellow Pages under "Staples." Or, you can call our toll-free Action-line: 1-800-543-4596

# BOTTOM-LOAD STAPLER


## Bottom-Load Guide Body Parts

MODEL	E	F
060006N (JG 1/2)	FB0009	FB0045
060008N (JG5/8)	FB0009	FB0045
060014N (JG45 5/8)	FB0019	FB0048
060004N (J 1/2)	FB0019	FB0046
060012N (J5 1/2)	FB0019	FB0047

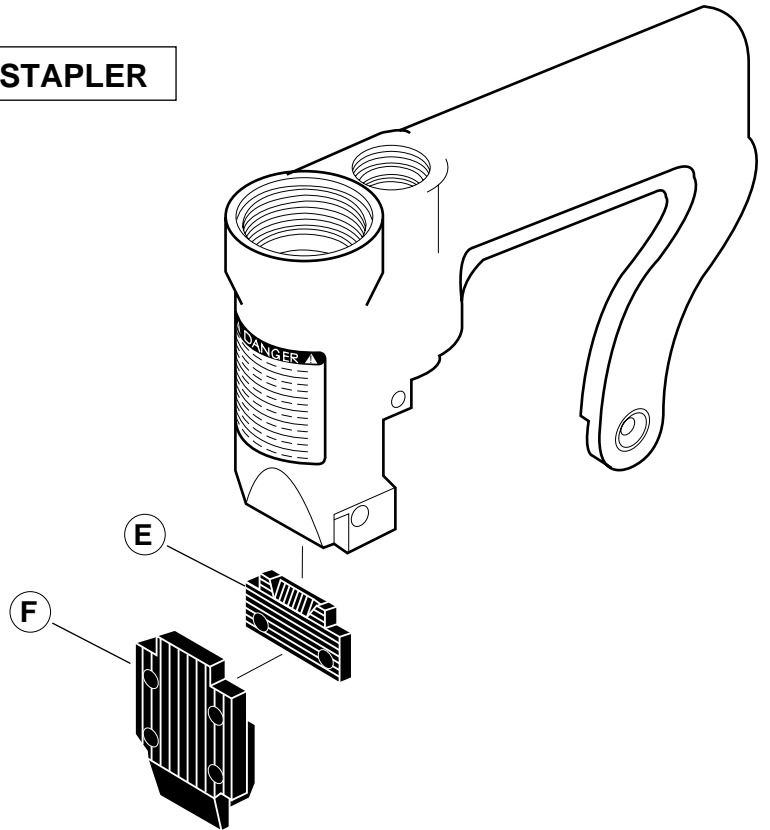

## Bottom-Load Magazine Parts


MODEL	K	M	N	O	P	R	S	T
060006N (JG 1/2)	GA0222	GA0228	GB0121	GB0110	KB5045	KB5145	GB0114	KB1546
060008N (JG 5/8)	GA0221	GA0226	GB0121	GB0110	KB5045	KB5145	GB0114	KB1546
060014N (JG45 5/8)	GA0224	GA0226	GB0121	GB0110	KB5045	KB5145	GB0114	KB1546
060004N (J 1/2)	GA0225	GA0227	GB0122	GB0111	KB5043	KB5144	GB0115	KB1556
060012N (J51/2)	GB0190	GA0227	GB0122	GB0111	KB5043	KB5144	GB0115	KB1556

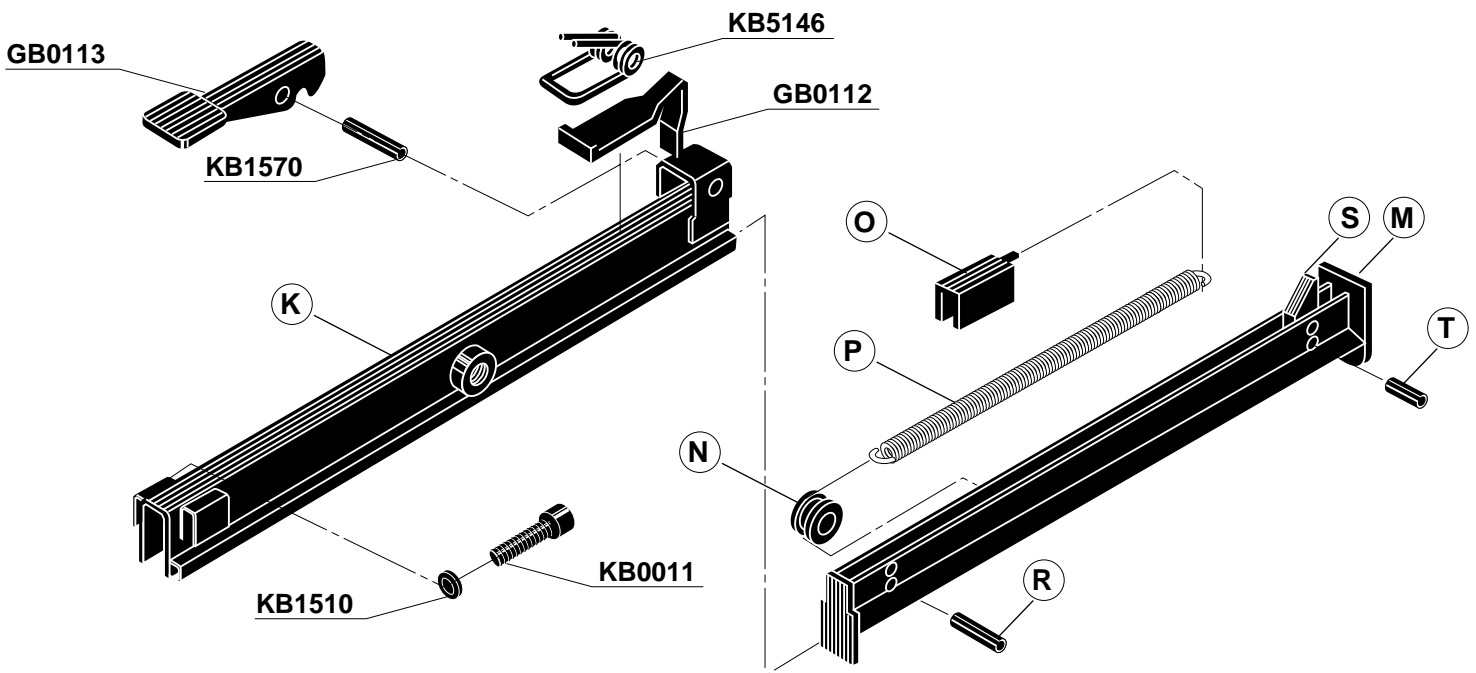

# TOP-LOAD STAPLER


## Top-Load Guide Body Parts


MODEL	F	G
060002N (JN 1/2)	FA0073	FA0080
060010N (JN5 1/2)	FA0075	FA0081
060067N (JN5 5/8)	FA0076	FA0081
060009N (JN2330 5/8)	FA0077	FA0080

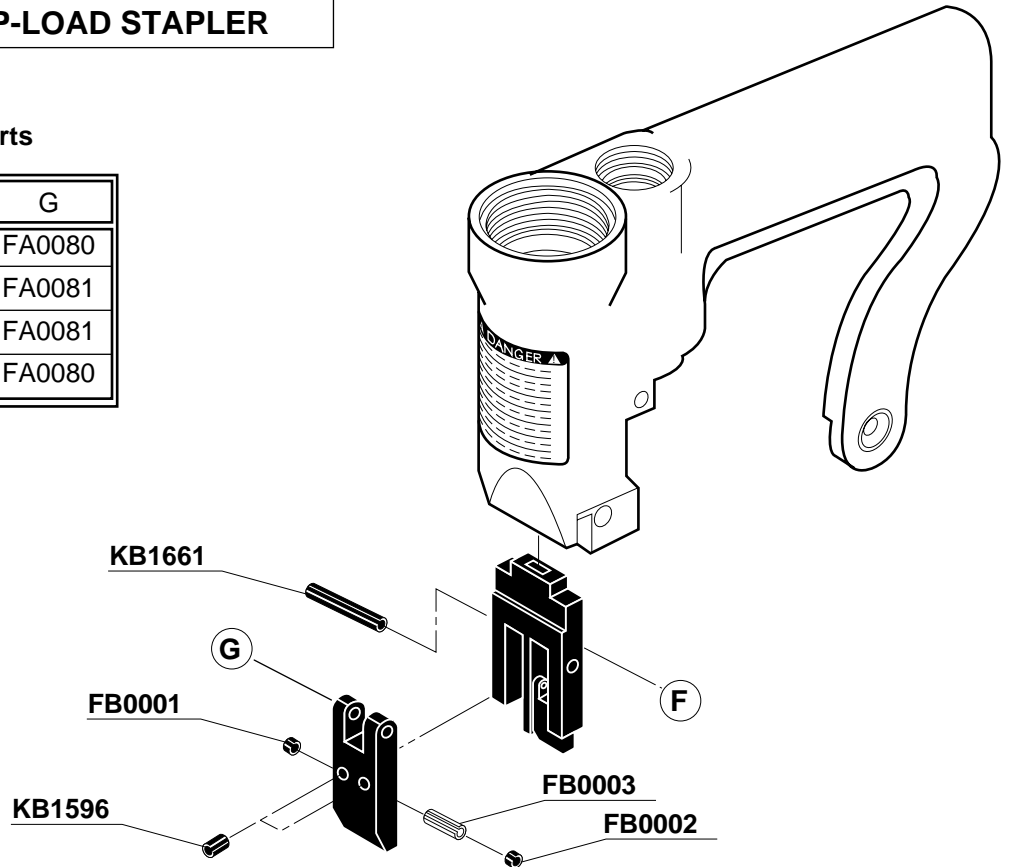

## Top-Load Magazine Parts

MODEL	A	B	C	D
060002N (JN 1/2)	GA0096	GA0107	GB0024	KB5043
060010N (JN5 1/2)	GA0100	GA0107	GB0025	KB5043
060067N (JN5 5/8)	GA0102	GA0107	GB0025	KB5043
060009N (JN2330 5/8)	GA0103	GA0107	GB0024	KB5043

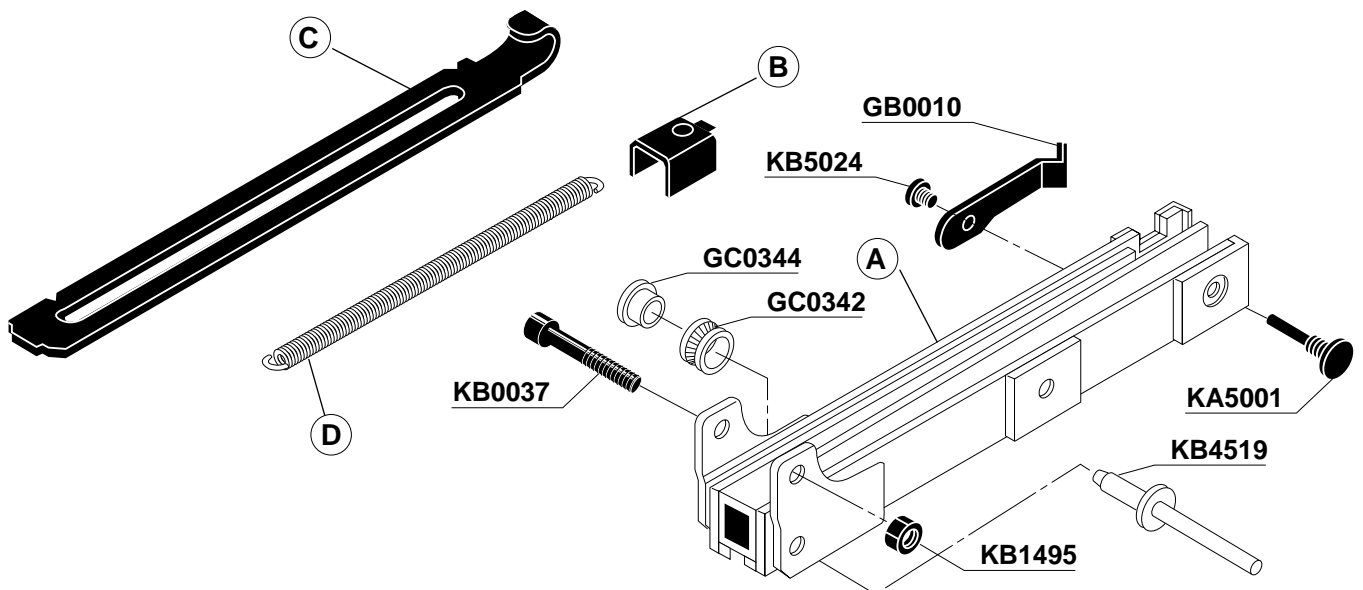

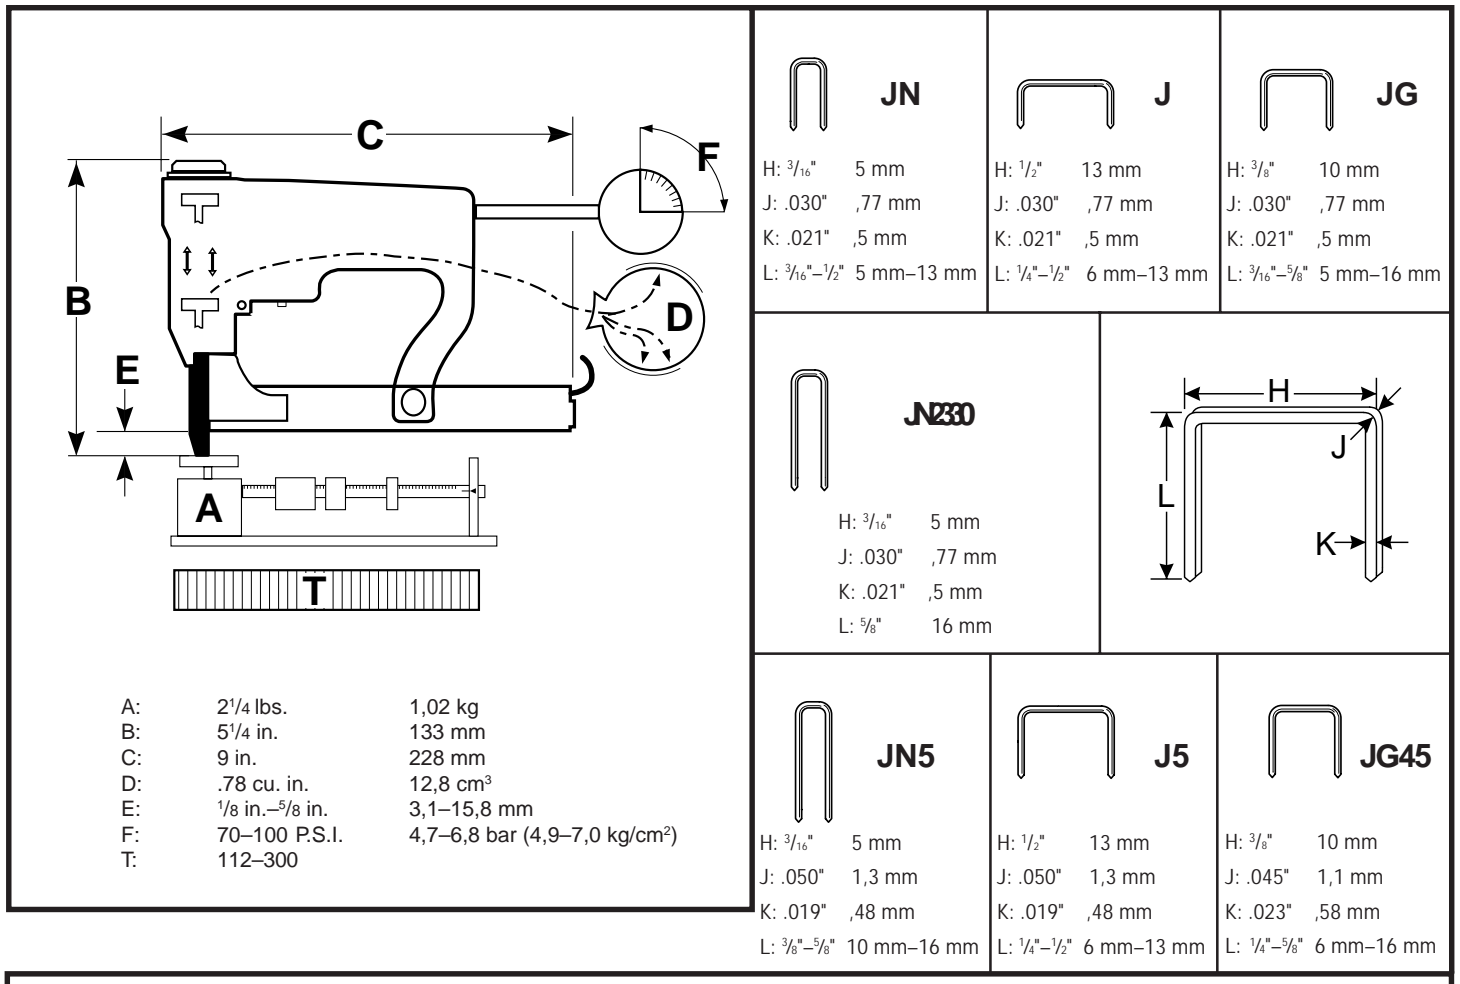

### J Stapler Replacement Parts List

PART#	DESCRIPTION	PART#	DESCRIPTION	PART #	DESCRIPTION
AA0040	MAIN BODY ASSY. (REGULAR)	FB0047	GUIDE BODY (J 5 1/2 B/L)	KB0280	SCREW
BA0050	CYLINDER CAP (MAGNET)	FB0048	GUIDE BODY (JG45 5/8 B/L)	KB0836	SCREW
BA0092	CYLINDER SLEEVE ASSY.	GA0096	MAGAZINE ASSY. (JN 1/2)	KB1495	NUT
BB0043	PISTON STOP	GA0100	MAGAZINE ASSY. (JN5 1/2)	KB1510	LOCKWASHER
CA0020	FIRING VALVE CAP ASSY.	GA0102	MAGAZINE ASSY. (JN5 5/8)	KB1529	LOCKWASHER
CA0022	TRIGGER CORE	GA0103	MAGAZINE ASSY. (JN2330 5/8)	KB1546	SPRINGPIN
CA0023	TRIGGER HOUSING	GA0107	FEEDER SHOE (JN, JN5, JN2330)	KB1552	SPRINGPIN
CA0032	FIRING VALVE TRIGGER CAP ASSY.	GA0221	MAGAZINE HOUSING (JG 5/8 B/L)	KB1556	SPRINGPIN
CA0069	FIRING VALVE STEM ASSY.	GA0222	MAGAZINE HOUSING (JG 1/2 B/L)	KB1570	SPRINGPIN
CC0082	FIRING VALVE STEM	GA0224	MAGAZINE HOUSING (JG45 5/8 B/L)	KB1596	SPRINGPIN
CC0083	TRIGGER PISTON ASSY.	GA0225	MAGAZINE HOUSING (J 1/2 B/L)	KB1661	SPRINGPIN
EA0021	DRIVER PIN ASSY.	GA0226	RAIL (JG 5/8 B/L, JG45 5/8 B/L)	KB4126	BACKUP SPRING
EB0058	DRIVER (JN REGULAR)	GA0227	RAIL (J 1/2 B/L, J5 1/2 B/L)	KB4519	RIVET
EB0060	DRIVER (JG45 REGULAR)	GA0228	RAIL (JG 1/2 B/L)	KB5024	SCREW
EB0123	DRIVER (JN 2330-1/16 CSK)	GB0010	STAPLE DOOR RETAINER	KB5029	SPRING
EC0162	DRIVER (J REGULAR)	GB0024	STAPLE DOOR (JN 1/2, JN2330 5/8)	KB5043	FEEDER SPRING
EC0163	DRIVER (JN5 REGULAR)	GB0025	STAPLE DOOR (JN5 1/2, JN5 5/8)	KB5045	FEEDER SPRING
EC0164	DRIVER (JG REGULAR)	GB0110	FEEDER SHOE (JB B/L)	KB5144	SPRINGPIN (B/L)
EC0165	DRIVER (J5 REGULAR)	GB0111	FEEDER SHOE (J 1/2 B/L)	KB5145	SPRINGPIN (JG B/L)
ED0001	MAIN PISTON	GB0112	RETAINING CLIP (J B/L)	KB5146	TORSION SPRING (B/L)
FA0073	BACKPLATE (JN-1/2)	GB0113	LATCH LEVER (J B/L)	LB0017	SEAL
FA0075	BACKPLATE (JN5-1/2)	GB0114	LATCH PIN (JG B/L)	LB0015	SEAL
FA0076	BACKPLATE (JN5-5/8)	GB0115	LATCH PIN (J 1/2 B/L)	LB0057	SEAL
FA0077	BACKPLATE (JN2330-5/8)	GB0121	FEEDER SPRING ROLLER (JG B/L)	LB0118	SEAL
FA0080	FRONT PLATE BOTTOM ASSY. (JN)	GB0122	FEEDER SPRING ROLLER (J B/L)	LB0760	SEAL
FA0081	FRONT PLATE BOTTOM ASSY. (JN5)	GB0190	MAGAZINE HOUSING (J5 1/2 B/L, J 1/2 B/L)	LB0765	SEAL
FB0001	RIGHT LATCH PIN	GC0342	ROLLER	LB5008	SEAL
FB0002	LEFT LATCH PIN	GC0344	AXLE	LB5014	SEAL
FB0003	PRELOAD PLUG	HB0058	TRIGGER	LB5015	SEAL
FB0009	BACKUP PLATE (JG B/L)	HG0004	LABEL (SAFETY PRECAUTIONS)	LB5016	SEAL
FB0019	BACKUP PLATE (J B/L)	KA5001	SPRING RETAINER	LB5018	SEAL
FB0045	GUIDE BODY (JG B/L)	KB0011	SCREW		
FB0046	GUIDE BODY (J 1/2 B/L)	KB0037	SCREW		